Load Rating Chart


Model 2277S



© Manitex 2003


NOTE: Additional copies of this Load Rating Chart can be purchased from your Manitex Distributor. When ordering, use the part number shown in the bottom left corner of this page.

RANGE DIAGRAM - FULLY EXTENDED OUTRIGGER CONFIGURATION -

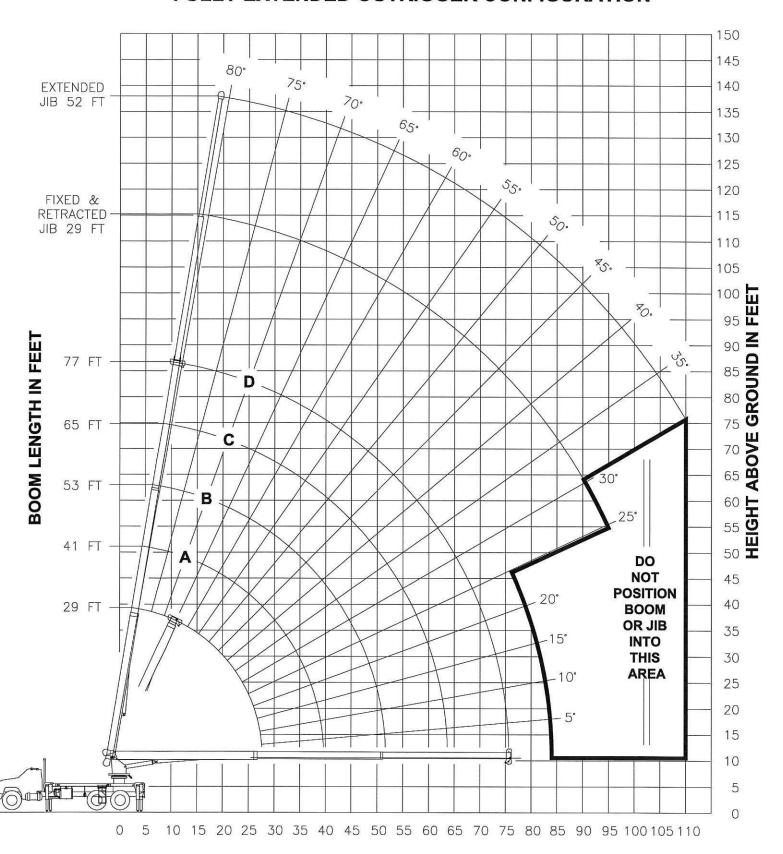

OPERATING RADIUS FROM CENTERLINE OF ROTATION IN FEET


USE THIS CHART ONLY
WHEN ALL OUTRIGGERS
ARE FULLY EXTENDED

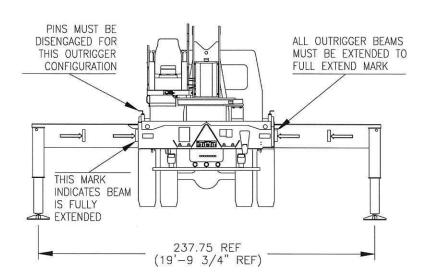

MAIN BOOM AND JIB LIFTING CAPACITIES

MAIN BOOM RATED LOADS											JIB RATED LOADS FOR ALL BOOM LENGTHS						
		(RETR) CODE 1	41 LMI	FT (A) CODE 1	53 LMI (FT (B) CODE 1	65 LMI	FT (C) CODE 1	77 LMI (77 FT (D) LMI CODE 1		29 FT FIXED JIB LMI CODE 2		29 FT TELE JIB LMI CODE 3		52 FT TELE JIB LMI CODE 4	
LOAD RADIUS (FT)	LOADED BOOM ANGLE (DEG)	LIFTING CAPACITY (LBS)	LOAD RADIUS (FT)	LOADED BOOM ANGLE (DEG)	LIFTING CAPACITY (LBS)	LOADED BOOM ANGLE (DEG)	LIFTING CAPACITY (LBS)	LOADED BOOM ANGLE (DEG)	LIFTING CAPACITY (LBS)								
5	80	44000									5						
8	74	31040									8						
10	69	26090	76	22000							10						
12	65	22570	73	21220	78	18500					12						
14	60	19910	70	18650	75	16850	79	14340			14						
17	53	16880	66	15800	72	14430	76	12540	79	11500	17						
20	45	14070	61	13710	69	12560	73	11060	77	9800	20						
25	27	10780	52	10970	63	10200	69	9120	73	8270	25	79	5070	79	4820		
30			42	8760	56	8500	64	7840	69	7030	30	77	4530	77	4270	80	3000
35			30	7120	49	7220	59	6670	65	6050	35	74	4050	74	3790	78	2900
40					41	5930	53	5750	61	5240	40	71	3640	71	3330	76	2640
45					31	4850	47	4920	56	4570	45	68	3220	68	2900	74	2410
50					17	3980	40	4060	51	4010	50	65	2860	65	2540	71	2200
55							33	3880	46	3430	55	62	2550	62	2220	69	2040
60							22	2840	40	2890	60	59	2270	59	1940	67	1840
65									34	2440	65	55	2040	55	1710	64	1670
70									25	2070	70	51	1830	51	1490	61	1510
75									13	1750	75	47	1650	47	1300	58	1350
80											80	43	1480	43	1130	55	1220
85											85	39	1290	39	970	52	1060
90											90	34	1080	34	760	49	940
95											95	29	900	29	580	46	830
100											100	21	740			43	720
105											105					39	630
110											110					35	520
	430) LBS	310	LBS	240	LBS	190) LBS	170	LBS	DEDUCTIONS FOR STOWED FIXED JIB						
	680	LBS	480) LBS	-	LBS	300	LBS	260	LBS	DEDU	JCTION:	S FOR S	TOWED	TELESC	OPIC L	JIB


RANGE DIAGRAM - MID EXTEND OUTRIGGER CONFIGURATION -

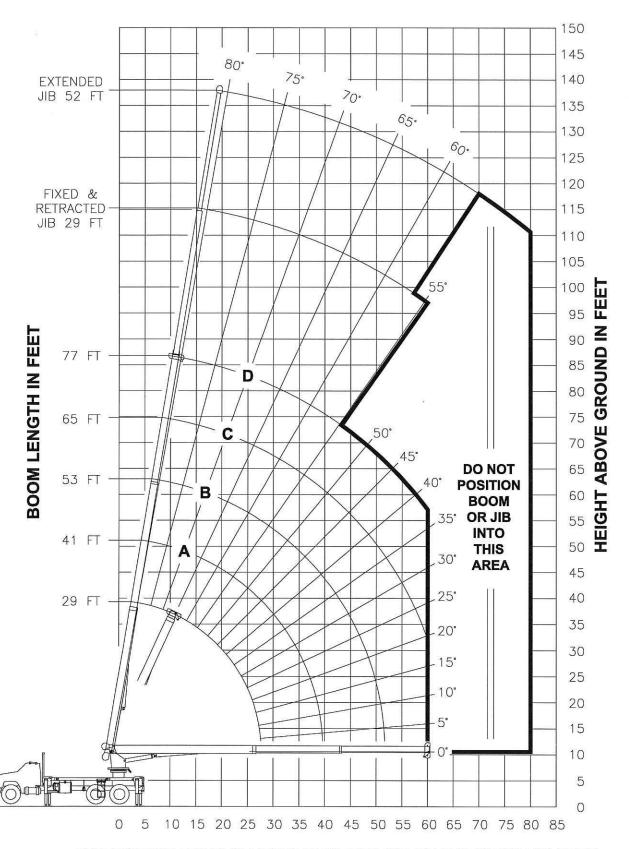

OPERATING RADIUS FROM CENTERLINE OF ROTATION IN FEET

NOTE: LIFTING PERSONNEL WITH CRANE IN THIS OUTRIGGER CONFIGURATION IS STRICTLY PROHIBITED. USE ONLY FULLY EXTENDED OUTRIGGER CONFIGURATION WHEN LIFTING PERSONNEL.


USE THIS CHART ONLY WHEN ALL OUTRIGGERS ARE IN THE MID EXTEND POSITION

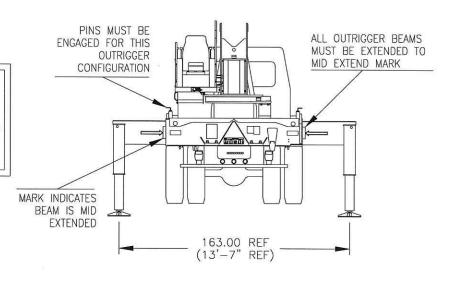

MAIN BOOM AND JIB LIFTING CAPACITIES

MAIN BOOM RATED LOADS											JIB RATED LOADS FOR ALL BOOM LENGTHS						
4		29 FT (RETR)			FT (D) CODE 9		29 FT FIXED JIB LMI CODE 10		29 FT TELE JIB LMI CODE 11			TELE JIB					
LOAD RADIUS (FT)	LOADED BOOM ANGLE (DEG)	LIFTING CAPACITY (LBS)	LOAD RADIUS (FT)	LOADED BOOM ANGLE (DEG)	LIFTING CAPACITY (LBS)	LOADED BOOM ANGLE (DEG)	LIFTING CAPACITY (LBS)	LOADED BOOM ANGLE (DEG)	LIFTING CAPACITY (LBS)								
5	80	44000									5						
8	74	31040									8						
10	69	26090	76	22000							10						
12	65	22570	73	21220	78	18500					12						
14	60	19590	70	18650	75	16850	79	14340			14						
17	53	13150	66	13400	72	13540	76	12540	79	11500	17						
20	45	9630	61	9860	69	9980	73	10060	77	9800	20						
25	27	6320	52	6550	63	6660	69	6730	73	6770	25	79	5070	79	4820		
30			42	4660	56	4770	64	4830	69	4870	30	77	4530	77	4270	80	3000
35			30	3440	49	3550	59	3610	65	3650	35	74	3680	74	3350	78	2900
40					41	2690	53	2750	61	2790	40	71	2810	71	2480	76	2640
45					31	2060	47	2120	56	2160	45	68	2170	68	1840	74	2260
50					17	1560	40	1630	51	1670	50	65	1670	65	1340	71	1760
55							33	1240	46	1280	55	62	1280	62	950	69	1360
60							22	920	40	970	60	59	960	59	630	67	1040
65				4							65	55	700			64	770
70									***		70					61	540
	430 LBS		310 LBS		240 LBS		190 LBS		170 LBS		DEDU	JCTIONS	S FOR S	STOWED	FIXED	JIB	
	680	LBS	480	LBS	370	LBS	300	LBS	260	LBS	DEDU	JCTIONS	FOR S	STOWED	TELESC	OPIC J	IB


RANGE DIAGRAM - FULLY RETRACTED OUTRIGGER CONFIGURATION -

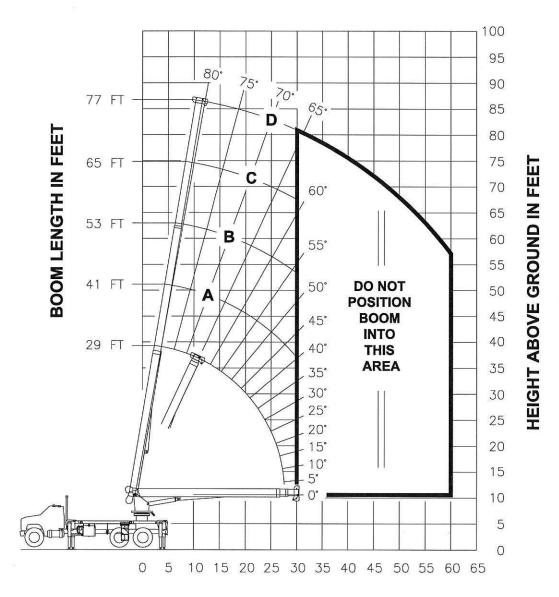

OPERATING RADIUS FROM CENTERLINE OF ROTATION IN FEET

NOTE: LIFTING PERSONNEL WITH CRANE IN THIS OUTRIGGER
CONFIGURATION IS STRICTLY PROHIBITED. USE ONLY FULLY
EXTENDED OUTRIGGER CONFIGURATION WHEN LIFTING PERSONNEL.


USE THIS CHART
ONLY WHEN ALL
OUTRIGGERS ARE
FULLY RETRACTED

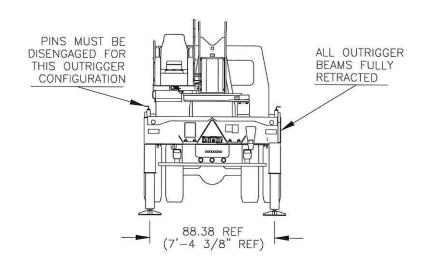

MAIN BOOM AND JIB LIFTING CAPACITIES

				MAIN BO	OM RA	TED LOA	ADS				
	29 FT (RETR) LMI CODE 13				53 FT (B) LMI CODE 13		65 FT (C) LMI CODE 13		77 FT (D) LMI CODE 13		
	LOADED BOOM ANGLE (DEG)	LIFTING CAPACITY (LBS)	LOADED BOOM ANGLE (DEG)	LIFTING CAPACITY (LBS)	LOADED BOOM ANGLE (DEG)	LIFTING CAPACITY (LBS)	LOADED BOOM ANGLE (DEG)	LIFTING	LOADED BOOM ANGLE (DEG)	LIFTING CAPACITY (LBS)	
5	80	44000	×								NO JIBS ARE TO
8	74	18120									BE ERECTED IN
10	69	11650	76	11890							THIS OUTRIGGER
12	65	8300	73	8510	78	8620					CONFIGURATION
14	60	6240	70	6440	75	6540	79	6610			П
17	53	4310	66	4500	72	4600	76	4660	79	4700	
20	45	3080	61	3270	69	3370	73	3420	77	3460	
25	27	1790	52	1990	63	2080	69	2130	73	2170	
30			42	1190	56	1280	64	1340	69	1370	IJ
	430 LBS		310 LBS		240 LBS		190 LBS		170 LBS		DEDUCTIONS FOR STOWED FIXED JIB
	680 LBS		480	LBS	370	LBS	300	LBS	260	LBS	DEDUCTIONS FOR STOWED TELESCOPIC JIB

	ALL	WARNING				
1 PART LINE	2 PART LINE	3 PART LINE	4 PART LINE	5 PART LINE	6 PART LINE	
CONTRIBUTE ON BALL	SHEAVE LOAD BLOCK	SHEAVE LOAD BLOCK	CA OB OBLE OR TRIPLE SHEAVE LOAD BLOCK	COUBLE OR TRIPLE AUXILIARY SHEAVE LOAD BLOCK BLOCK	LOAD BLOCK BLOCK	ANTI-TWO-BLOCK SYSTEM MUST BE IN GOOD OPERATING CONDITION BEFORE OPERATING CRANE. REFER TO OWNER'S MANUAL. KEEP AT LEAST 3 WRAPS OF LOAD LINE ON DRUM AT ALL TIMES.
8500 LBS	17000 LBS	25500 LBS	34000 LBS	42500 LBS	44000 LBS	9/16" — 6X25 IWRC (3.5:1 S.F.) 29750 LBS. BREAKING STRENGTH
7700 LBS	15400 LBS	23100 LBS	30800 LBS	38500 LBS	44000 LBS	9/16" ROT RESISTANT (5.0:1 S.F.) 38500 LBS. BREAKING STRENGTH

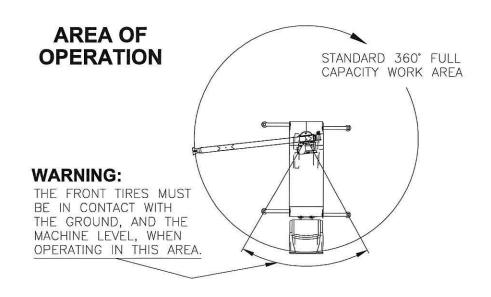

DEDUCTIONS FROM RATED LOADS FOR LOAD HANDLING DEVICES SUPPLIED BY MANITEX

OVERHAUL BALL — — — — SEE	OVERHAUL BALL MANUFACTURER NAMEPLATE
LOAD BLOCK — — — — — —	- SEE BLOCK MANUFACTURER NAMEPLATE
HOSE REEL	— — — — — — 160 LBS
SWING AROUND JIB — — — —	SEE LOAD CHART

LMI OPERATING CODES

SETTING CRANE CONFIGURATION OU	TRIGGER CONFIGURATION
#3 TELESCOPIC JIB-RETRACTED	FULLY EXTENDED FULLY EXTENDED FULLY EXTENDED
#5—— PERSONNEL LIFTING PLATFORM ON MAIN BOOM ——————————————————————————————————	FULLY EXTENDED FULLY EXTENDED
#9 MAIN BOOM	INTERMEDIATE INTERMEDIATE INTERMEDIATE INTERMEDIATE
#13 — MAIN BOOM — — — — — — — — — — — — —	FULLY RETRACTED

WARNING

- 1. THE OPERATOR MUST READ AND UNDERSTAND THE OWNER'S MANUAL BEFORE OPERATING THIS CRANE.
- 2. POSITIONING OR OPERATION OF CRANE BEYOND AREAS SHOWN ON THIS CHART IS NOT INTENDED OR APPROVED EXCEPT WHERE SPECIFIED IN OWNER'S MANUAL.
- 3. LOADED BOOM ANGLES AT SPECIFIED BOOM LENGTHS GIVE ONLY AN APPROXIMATION OF THE OPERATING RADIUS. THE BOOM ANGLE BEFORE LOADING SHOULD BE GREATER TO ACCOUNT FOR DEFLECTIONS. DO NOT EXCEED THE OPERATING RADIUS FOR RATED LOADS.
- 4. THE OPERATING RADIUS SHOWN IN THE JIB RATING CHART IS FOR FULLY EXTENDED BOOM ONLY. WHEN BOOM IS NOT FULLY EXTENDED, USE ONLY LOADED BOOM ANGLE TO DETERMINE LOAD RATING OF JIB.
- 5. FOR BOOM ANGLES NOT SHOWN ON JIB LOAD RATING CHART, USE RATING OF NEXT LOWER BOOM ANGLE.
- 6. FOR BOOM LENGTHS NOT SHOWN, USE RATING OF NEXT SHORTER OR LONGER BOOM LENGTH, WHICHEVER IS LESS. FOR RADII NOT SHOWN, USE RATING OF NEXT LONGER RADIUS.
- 7. CRANE LOAD RATINGS ON OUTRIGGERS ARE BASED ON FREELY SUSPENDED LOADS WITH THE MACHINE LEVELED AND STANDING ON A FIRM UNIFORM SUPPORTING SURFACE. NO ATTEMPT SHALL BE MADE TO MOVE A LOAD HORIZONTALLY ON THE GROUND IN ANY DIRECTION.

WARNING (CONTINUED)

- 8. PRACTICAL WORKING LOADS DEPEND ON SUPPORTING SURFACE, WIND, AND OTHER FACTORS AFFECTING STABILITY SUCH AS HAZARDOUS SURROUNDINGS, EXPERIENCE OF PERSONNEL, AND PROPER HANDLING, ALL OF WHICH MUST BE TAKEN INTO ACCOUNT BY THE OPERATOR.
- 9. THE MAXIMUM LOAD WHICH MAY BE TELESCOPED IS LIMITED BY HYDRAULIC PRESSURE, BOOM ANGLE, AND BOOM LUBRICATION. IT IS SAFE TO ATTEMPT TO TELESCOPE ANY LOAD WITHIN THE LIMITS OF THE LOAD RATING CHART.
- 10. LIFTING OFF THE MAIN BOOM POINT WHILE THE SWING AROUND JIB IS ERECTED IS NOT INTENDED OR APPROVED.

INFORMATION

- 1. DEDUCTIONS MUST BE MADE FROM RATED LOADS FOR STOWED JIB, OPTIONAL ATTACHMENTS, HOOKS, AND LOADBLOCKS (SEE DEDUCTION CHART). WEIGHTS OF SLINGS AND ALL OTHER LOAD HANDLING DEVICES SHALL BE CONSIDERED A PART OF THE LOAD.
- 2. LOAD RATINGS ABOVE THE HEAVY LINE ARE STRUCTURALLY LIMITED CAPACITIES. LOAD RATINGS BELOW THE HEAVY LINE ARE STABILITY LIMITED CAPACITIES AND DO NOT EXCEED 85% OF TIPPING.

DEFINITIONS

- 1. OPERATING RADIUS IS THE HORIZONTAL DISTANCE FROM THE AXIS OF ROTATION TO THE CENTER OF THE VERTICAL HOIST LINE OR TACKLE WITH LOAD APPLIED.
- 2. LOADED BOOM ANGLE AS SHOWN IN THE COLUMN HEADED BY \angle , IS THE INCLUDED ANGLE BETWEEN THE HORIZONTAL AND LONGITUDINAL AXES OF THE BOOM BASE AFTER LIFTING RATED LOAD AT RATED RADIUS.